



Dimensions 15-17 inch Kiosk (portrait)

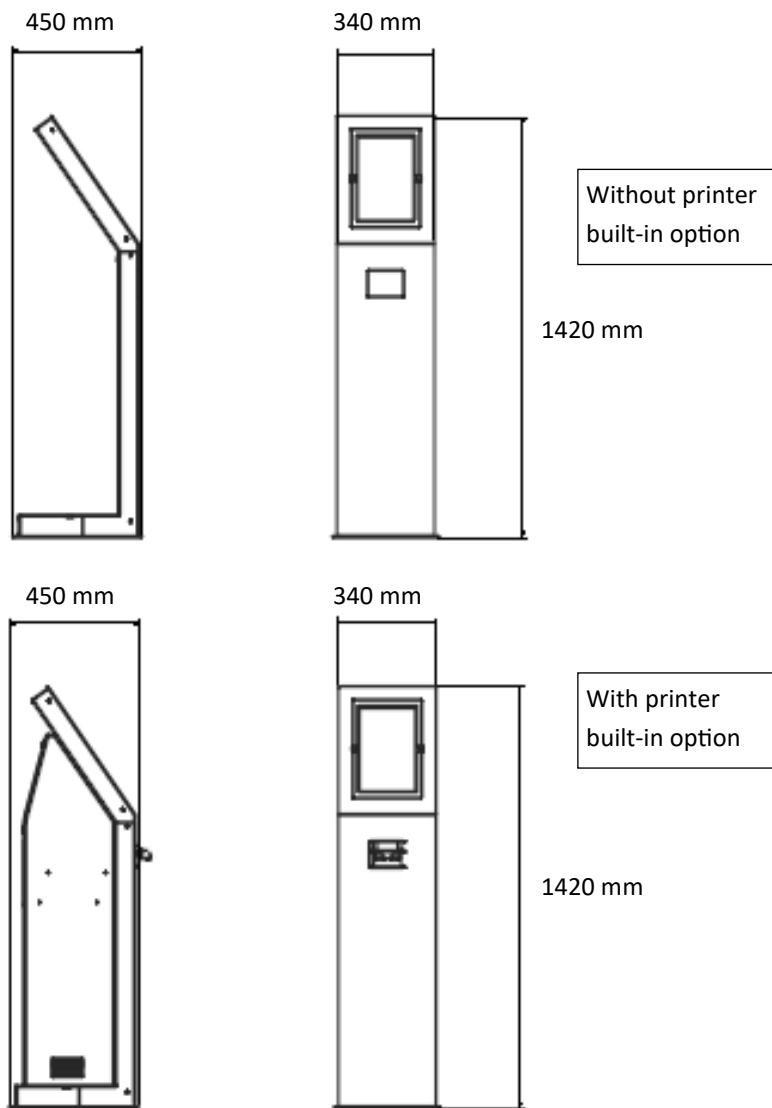

15-17 inch Kiosk Portrait

DID010.080.000

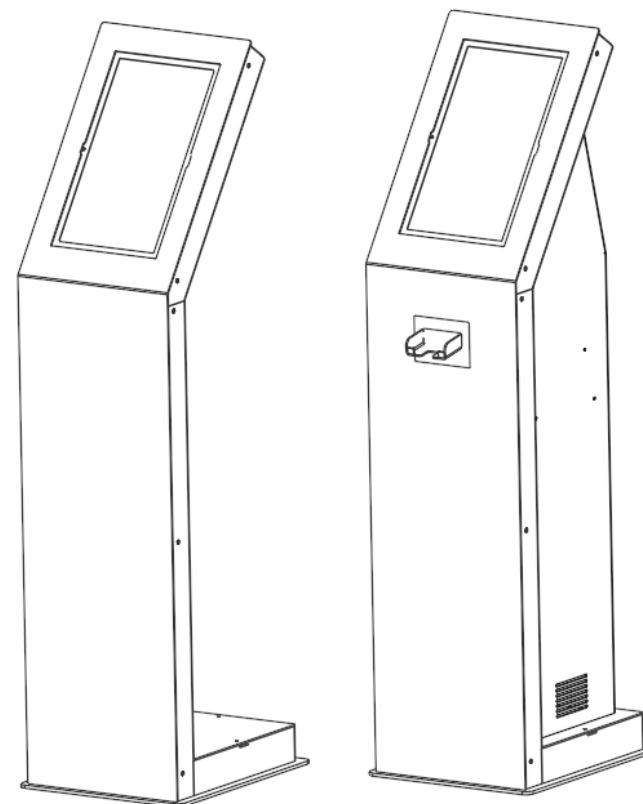

SPECIAL WARNING

INSTALLATION AND SERVICE MUST BE PERFORMED BY A QUALIFIED INSTALLER. READ AND SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE.

UNPACKING YOUR KIOSK

Remove all packing materials from the kiosk carefully.
Remove the kiosk according to the instructions on the next page.

IMPORTANT NOTES TO THE INSTALLER

Keep this manual for future reference.

- Always handle this product with two people (> 25kg)
- This product should only be installed and grounded properly by a qualified installer or service technician.

TOOLS



Cordless drill
Cross head bit



Hex set

FIXING MATERIALS



 
M4x20m



M5 washer



M5x20m



Spacer 10





M4 washer



M4x10m

8. Attach the backplate to the two backsides



6

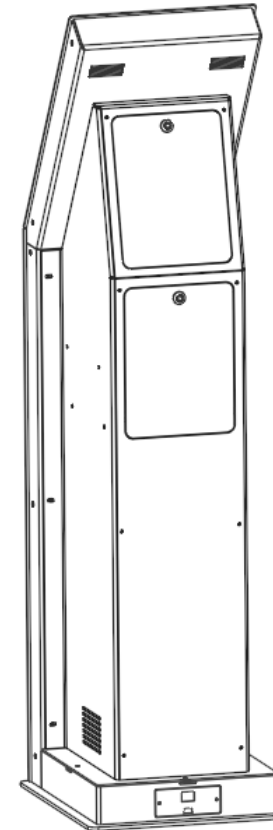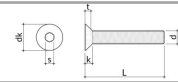

Attach the backplate to the two backsides.
close the back plates using the cover plates



1. Attach the VESA plate to the monitor by means of 4 pieces of supplied M4 bolts

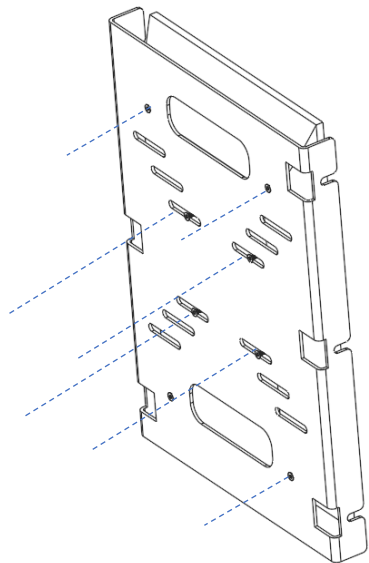
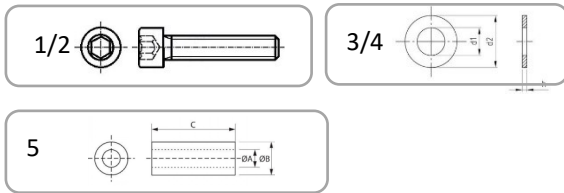


Before attaching the screen to the VESA plate, attach all cables first. Test the screen before mounting in the kiosk.

Place the 10 mm spacer (5) between the monitor and the VESA plate.

Then tighten the 4 M4 bolts on the end against the monitor

6. Attach the printer tray into the two backsides

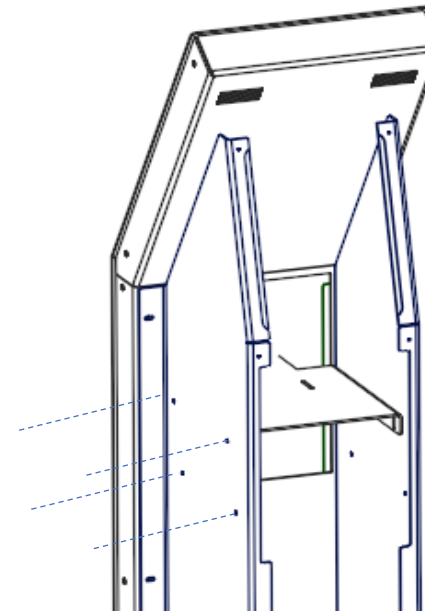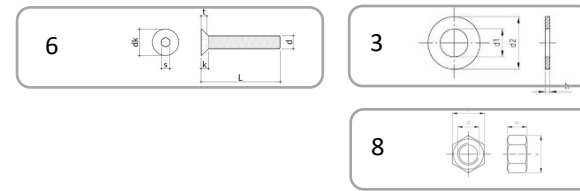


Place the Printer tray between the two back sides:


For the Brother QL-820NWB printer place the tray on the top 4 screw holes

For the Fargo DTC1250e printer place the tray on the lowest 4 screw holes

7. Place the printer into the kiosk and attach the cables

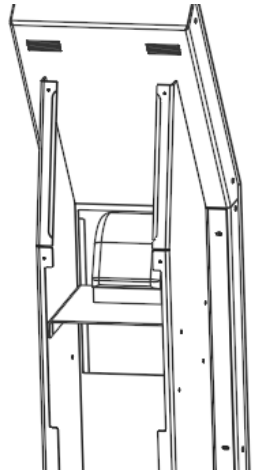


Brother QL-820NWB

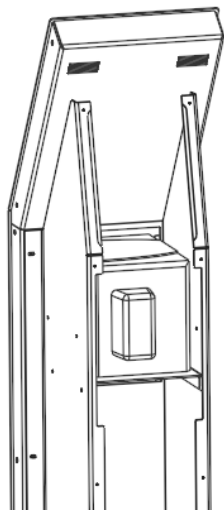

Fargo DTC1250e



Disconnect the kiosk from the pallet

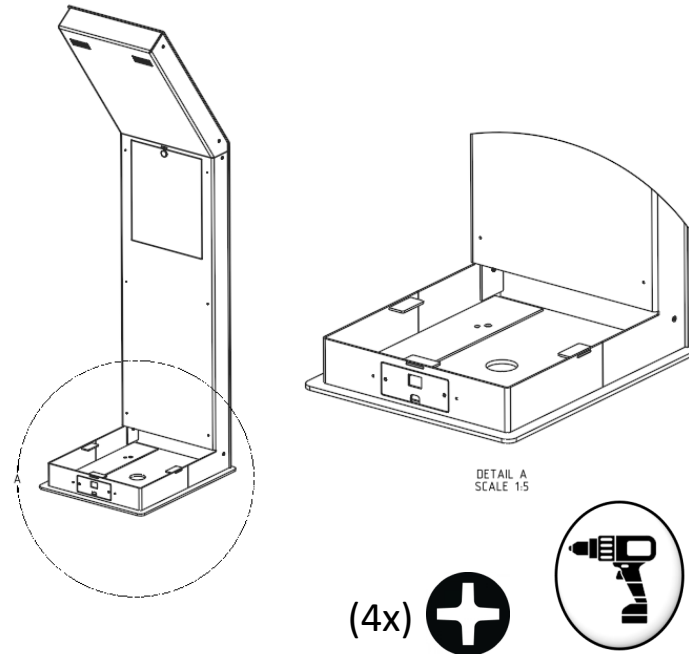

Remove the back plates from the kiosk with the M4 hexagon socket bolts on the back.

Then unscrew the kiosk from the pallet. This is secured with 4 crosshead screws.


3. Attach the Frontplate into the Kiosk

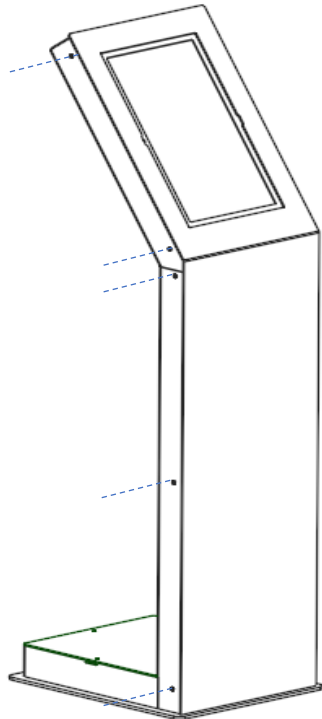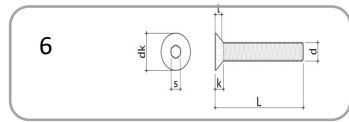

Slide the front plate into the kiosk and fix the front plate to the sides with 6x M4x10 bolts

Make sure the ends of the cables are on the bottom/back of the kiosk



4. Attach the cables

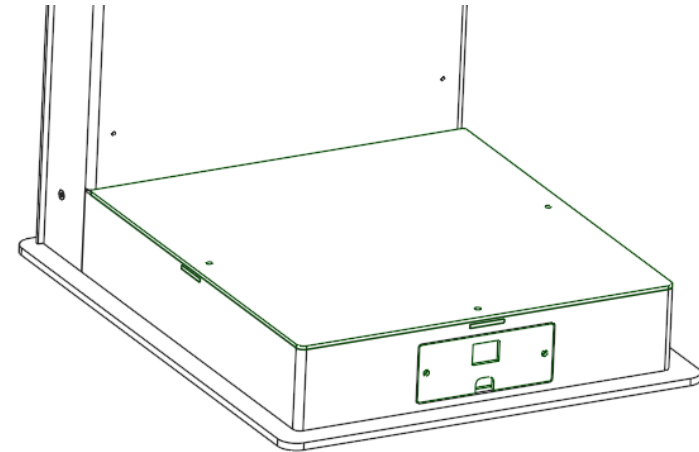

Remove the cable plate and connect the cables to the power and network



Check that everything works and close the back cover.

5. Attach the Printer backsides to the kiosk

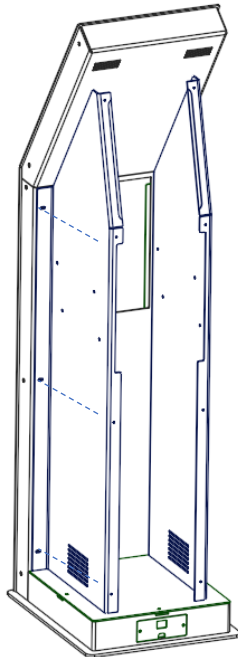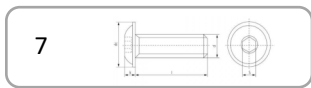

Fix the two back plates for the printer by means of the 6 M4 spherical cylinder head socket head screws. (black)

2. Attach the VESA plate in the Kiosk Front plate

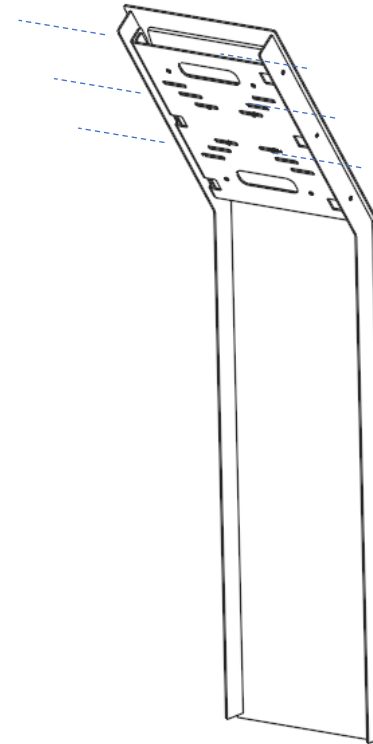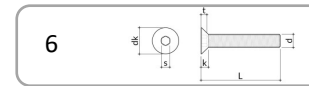

Slide the VESA plate with the monitor into the steel strips of the front plate.

Then tighten the 6 M4x10 bolts firmly.